




Nokia 6560 Speaker Replacement

Written By: Nathan Whitacre

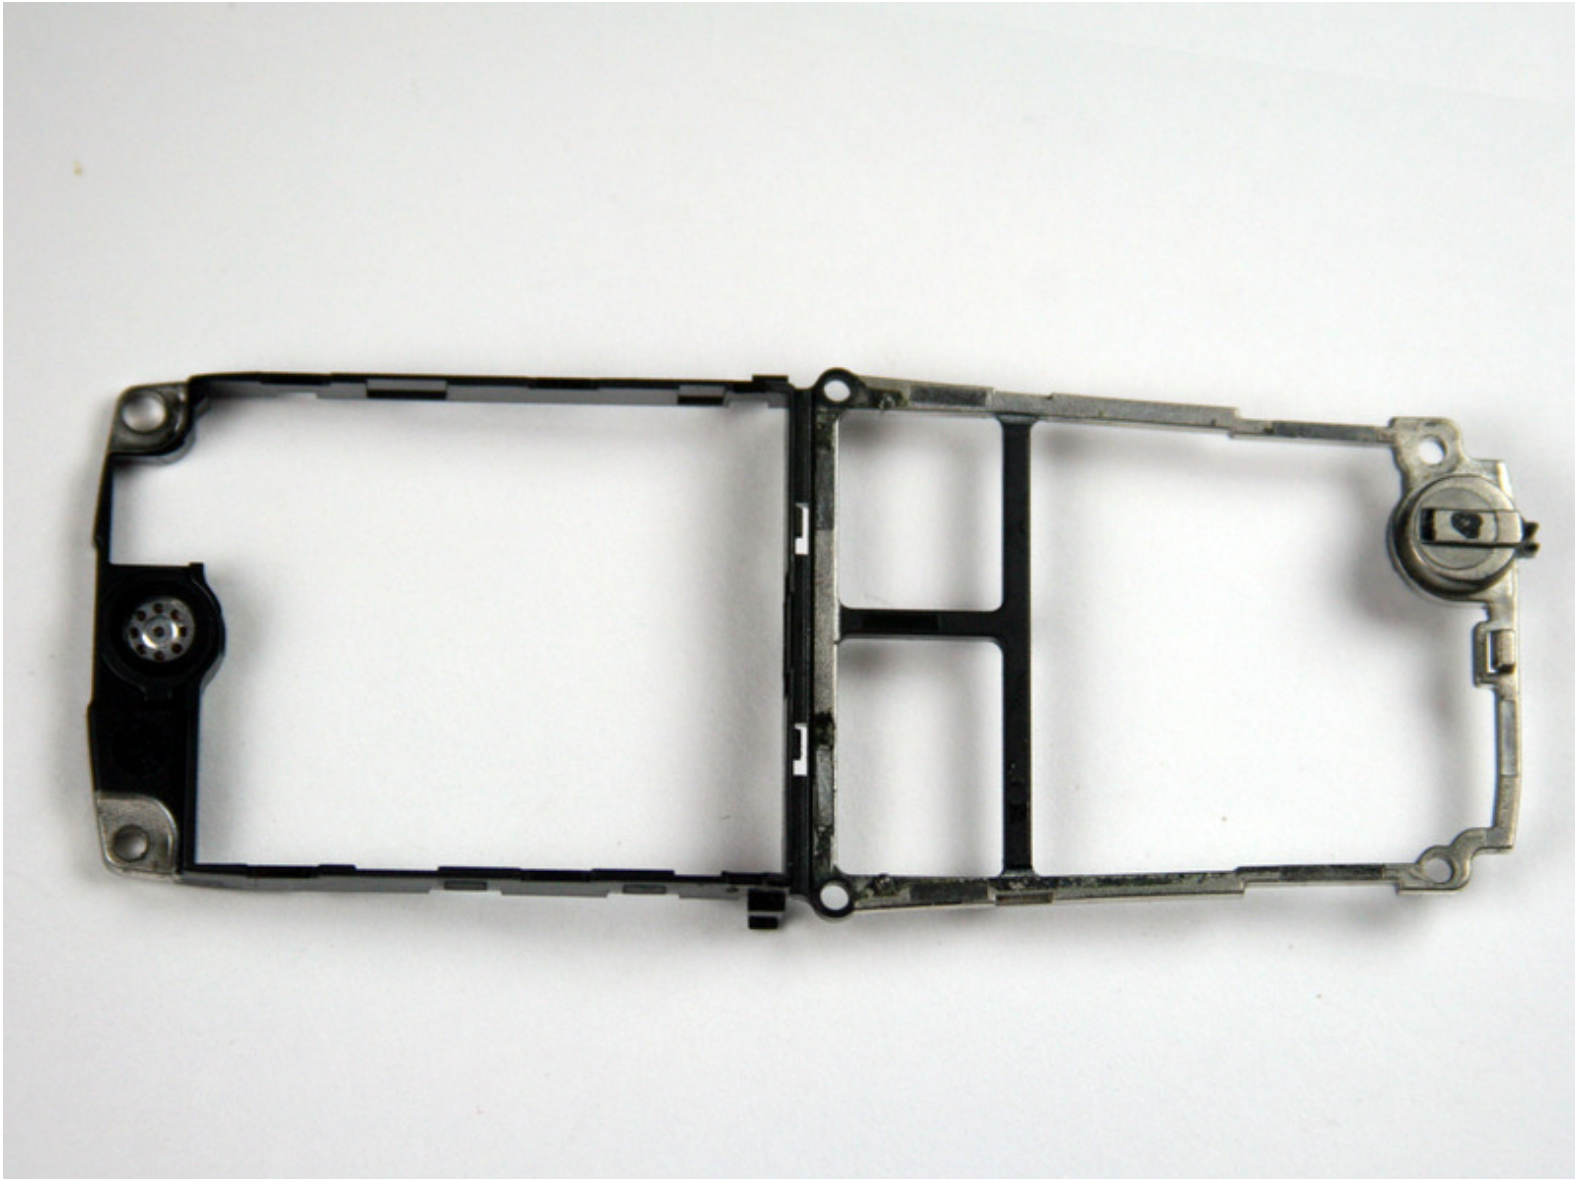

INTRODUCTION

This guide shows you how to replace the speakers on your Nokia 6560.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the back cover of your cell phone by pushing the small slider with your fingernail towards the top of the phone.
- Lift off your cell phone's back cover.

Step 2




- Use your index finger to first push down and then lift up the battery as shown.
- Remove the battery from your cell phone.

Step 3 — Keypad



- Open the front cover of your cell phone with the plastic opening tool or finger nail.
- Lift the cover upwards, starting from the bottom below the keypad.

Step 4

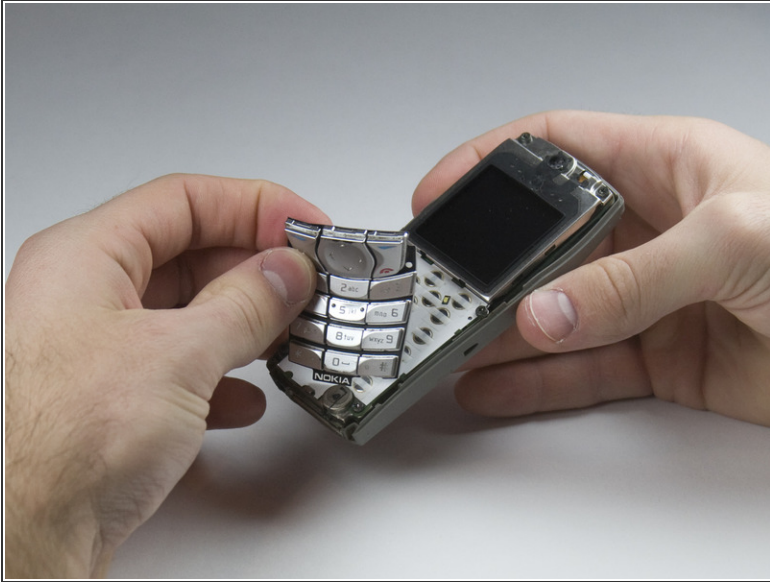


- Lift the keypad off of the keyboard as it is not attached to the phone anymore.

⚠ If you want to clean your keyboard do not use chemical cleaners or too much water, instead, use a damp cloth.

ℹ It may be tricky to get the keypad in the right position while closing the front cover for the reassembly. Ensure they are aligned properly before closing the front cover!


Step 5 — Keyboard

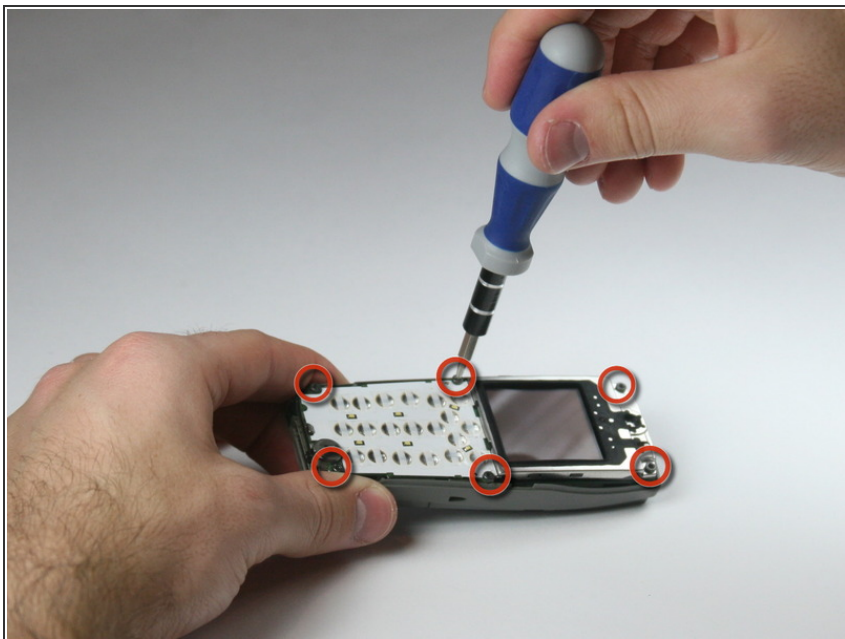

- Unscrew the six T6 torx screws which attach the frame to the cell phone case.


⚠ Be careful not to scratch your display with the screw driver.

Step 6

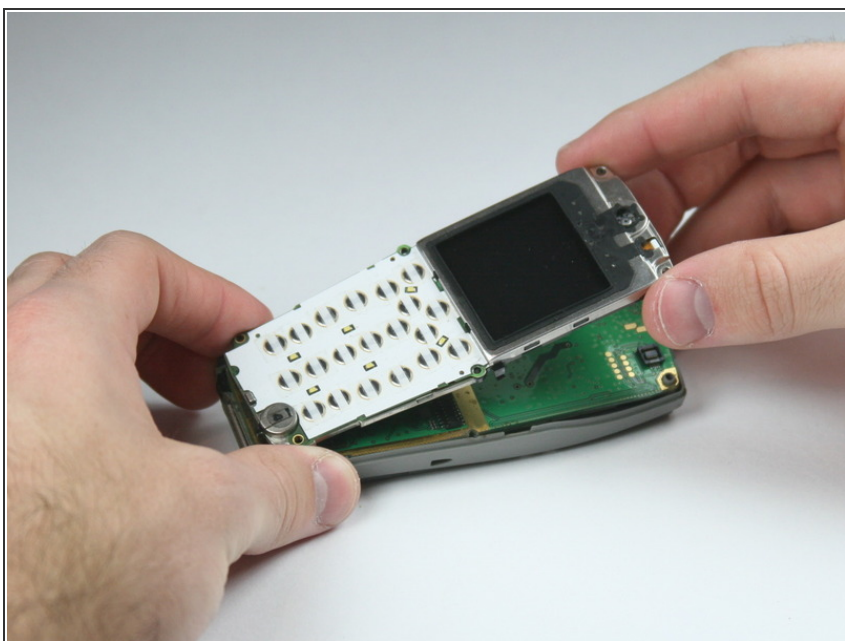


- Lift the frame off of your cell phone.

Step 7

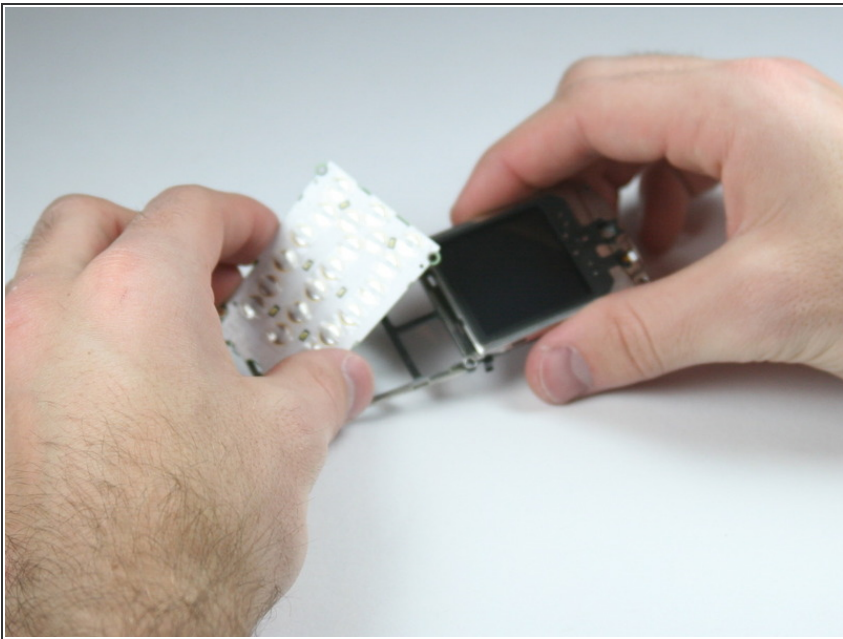

- Lift the keyboard out of the plastic frame.


Step 8 — Display

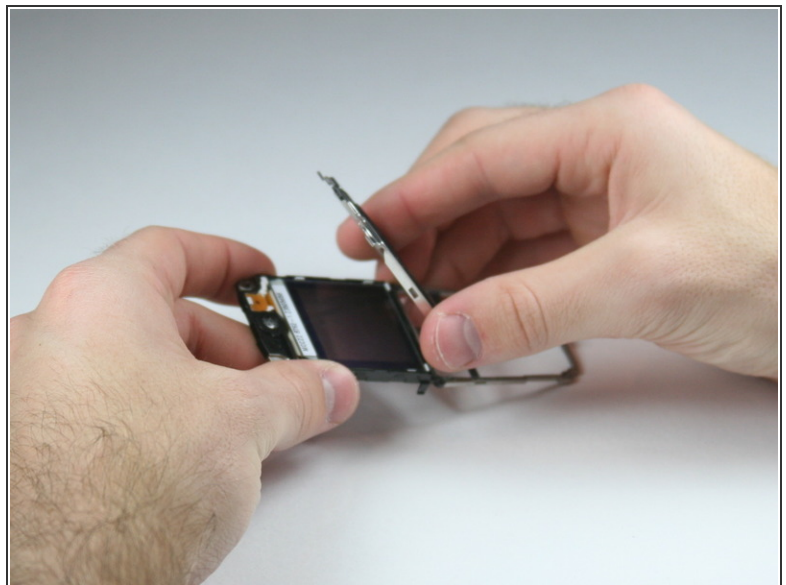

- Use the plastic opening tool to unmount the thin metal frame at the tab connections. You must do this on both sides.
- Lift the thin metal frame off of the plastic frame.


⚠ Pay attention while lifting the frame off because it can easily be bent.

Step 9

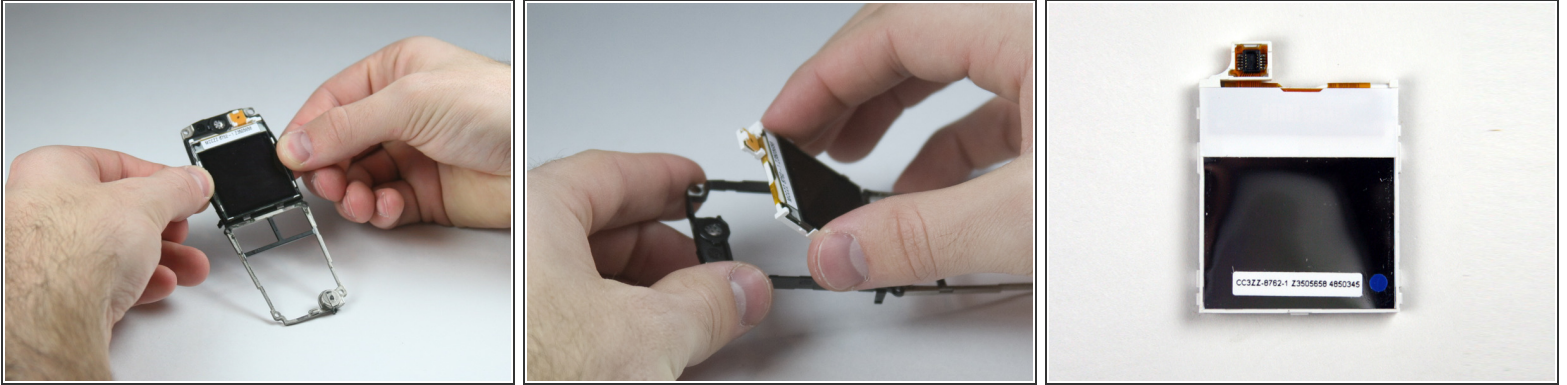

- Pull the sides of the plastic frame apart in order to loosen the display.
- Take the display out of the plastic frame.

Step 10 — Speaker

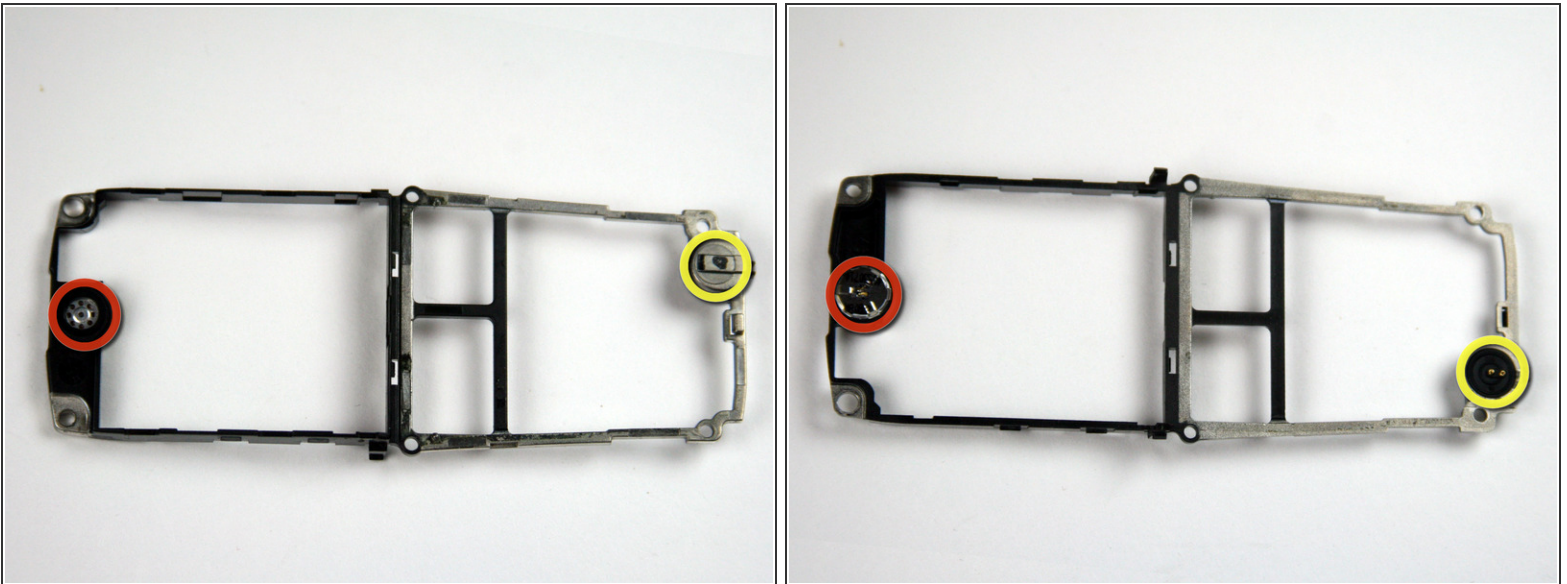

- Now you have the bare plastic frame that holds the speaker.
- The microphone is held at the bottom of this frame.
- Neither the speaker nor the microphone can be repaired. You must replace the whole frame.

To reassemble your device, follow these instructions in reverse order.

